



Installation, Operation and Care Manual



SCAN ME
TO GO TO
WARRANTY
REGISTRATION

MANUFACTURING
SINCE 1966

4-INS-TSK0004

THE CHEFS COMPANION



**THANK YOU FOR PURCHASING
AN ANVIL PRODUCT!**

REGISTER ONLINE TODAY

Register your warranty on-line at www.anvilworld.com today and learn how to get the best out of your Anvil product, tips to care for your Anvil product for long lasting performance, exciting recipes and more.

NO WEB ACCESS?

If you do not have access to the Web, register by completing this form and faxing it to the Anvil head office in South Africa. Fax: +27 11 474 1630

ONLY COMPLETE IF YOU DO NOT HAVE WEB ACCESS

Company _____

Name _____

Surname _____

Telephone _____

Cellphone _____

Email Address _____

Country _____

Postal address _____

Anvil products purchased _____

Code (see box label) _____

Serial number (see back of machine) _____

INTENDED USE

- ☐ Full-Service restaurant
- ☐ Coffee Shop / Deli
- ☐ Fast Food Outlet
- ☐ Hotel
- ☐ Bed & Breakfast
- ☐ School Cafeteria

- ☐ Institutional Cafeteria
- ☐ Corporate Catering
- ☐ Private Use
- ☐ Franchisor
- ☐ Convenience Store
- ☐ Other



**ALL ANVIL EQUIPMENT COMES WITH A TWO
YEAR WARRANTY ON COMPONENTS AND
DEFECTIVE WORKMANSHIP.**

www.anvilworld.com

LIMITED WARRANTY

All equipment which is sold under ANVIL trademark and used for commercial purposes is warranted against defects in materials and workmanship. The warranty runs for two years from the date of original installation and is for the benefit of the original purchaser only. All other Warranties ,expressed or implied , statutory or otherwise, including without limitations any implied Warranty of Merchantability or fitness for purpose are excluded .The Seller shall in no event be liable for direct,indirect or consequential damages in connection with ANVIL commercial products.

The Sellers obligation under this Warranty is limited to the repair of defects without charge. Defective units must be taken or shipped,transportation charges prepaid,to ANVIL.

This Warranty is not effective if damage occurs because of accident,carelessness,improper installation,lack of proper set-up,supervision when required or if the equipment is installed or operated in any manner contrary to the installation and operating instructions. In these cases,repairs will be made at a reasonable cost. Work performed by unauthorized personnel or unauthorized service agencies using non Anvil spares voids this Warranty.



NB:

REGISTER ON-LINE TODAY

 
Register your warranty on-line now at www.anvilworld.com

NO WEB ACCESS

If you do not have access to the Web. Kindly register by completing the warranty registration form and fax it to the ANVIL office in the country of purchase.

Failure to do so will invalidate your warranty.

ELECTRIC TOASTER

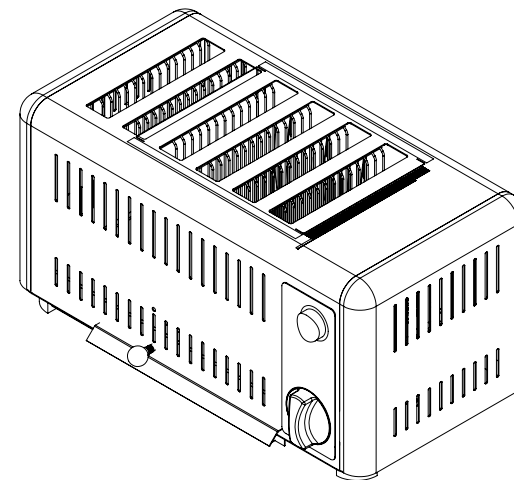

**INSTALLATION OPERATION AND CARE OF
4&6 SLICE TOASTER ELECTRIC
MODELS: TSK0004 R02/TSK0006 R02**

UNPACKING

Unpack the product and check for any damage incurred during transit. This should be reported to the responsible carrier, railway or postal authority, and a request for a damage report should be made.



THESE INSTRUCTIONS MUST BE FOLLOWED FOR US TO GUARANTEE OUR FULL SUPPORT OF YOUR CLAIM FOR PROTECTING AGAINST LOSS FROM CONCEALED DAMAGE. THE FORM FOR FILING SUCH A CLAIM WILL BE PROVIDED BY THE CARRIER.

GENERAL INSTALLATION AND OPERATION INSTRUCTIONS:

1. Install the toaster in the most convenient location for ease of cleaning, maintenance and general operation. If this appliance is to be positioned in close proximity to a wall, partitions, kitchen furniture, decorative finishes, etc. it is recommended that they be made of non-combustible heat insulating material, and the closest attention be paid to fire prevention regulations.
2. Place the bread into the respective slots in the toaster carriage and lift the bakelite knob.
3. For optimized usage, the Anvil 4 and 6 slice toasters have the option of variable slice settings. This enables the units to be set for two, four or on the TSK 0006 six slices, depending on requirements (See diagram A). The number of slices to be toasted for each appliance respectively can be selected by positioning the rocker switch to the required setting (See diagram B).
4. Set the timer to the desired toasting time required. The respective elements will immediately switch on as well as the "TIMER" pilot light. An audible "TING" will also sound at the end of the time cycle.
5. When the time has elapsed, the respective toaster elements, as well as the "TIMER" pilot light will switch off.

SIX SLICE TOASTER
MODEL CODE : TSK0006 R02

Part No.	Description
1	WIRE GRID
2	OUTER ENCLOSURE
3	FACIA PANEL
4	SWITCH
5	CONTROL KNOB
6	MECHANICAL TIMER
7	6 FINGER LEVER
8	LEVER KNOB
9	LEVER HANDLE
10	FINGER PLATE LEVER SPRING
11	CRUMB TRAY
12	FOOT
13	BOTTOM PANEL
14	INNER ENCLOSURE
15	BUZZ BARS
16	SIDE ELEMENT 370W
17	CENTRE ELEMENT 500W
18	CABLE GLAND
19	POWER CORD

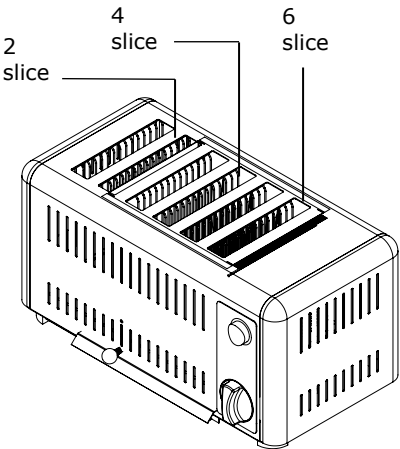 


Diagram A

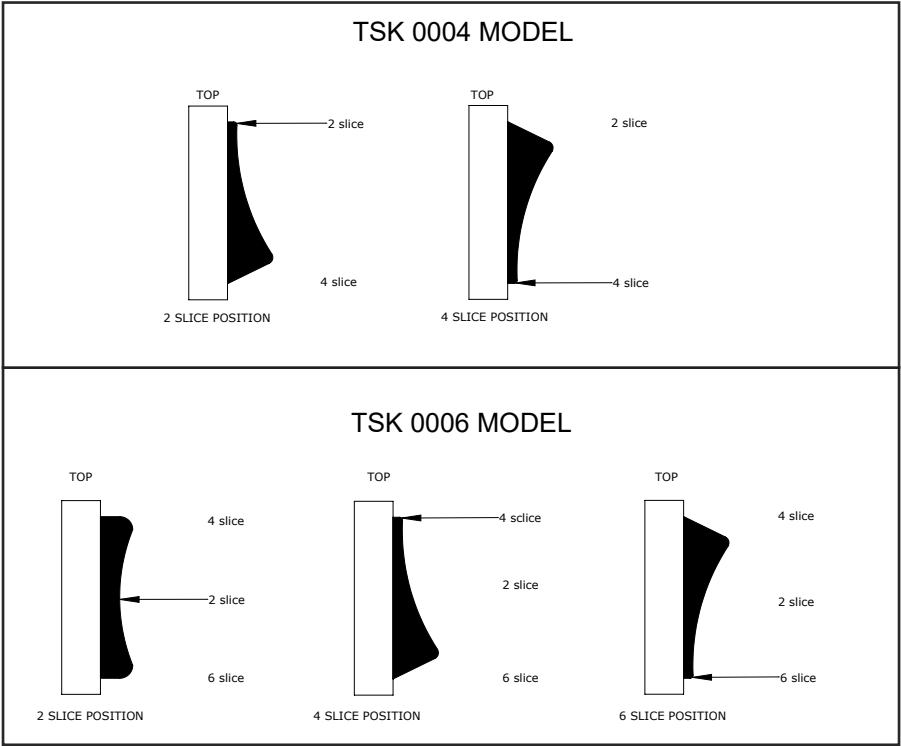 


Diagram B



WARNING

Burn Hazard.

Do not touch hot food, liquid or heating surfaces while equipment is heating or operating

Hot surfaces and food can burn skin. Allow the hot surfaces to cool before handling

 
CLEANING

1. Always ensure that the unit is disconnected from the mains power supply before cleaning
2. This toaster should not be cleaned with a water jet or immersed in water. Use only a damp cloth or sponge dipped in soapy water.
3. Wipe off the unit with a dry cloth and wait at least half an hour before re-connecting to the mains outlet.
4. Remove the crumb tray from the unit by pulling forward.
5. Do not use a sharp knife or object to dislodge toasted slices from the carriage as this may damage the elements and invalidate the warranty



THIS APPLIANCE SHOULD NOT BE CLEANED WITH A WATER JET OR IMMERSED IN WATER. USE ONLY A DAMP CLOTH OR SPONGE DIPPED IN SOAPY WATER. DO NOT USE STEEL-WOOL WHICH WILL MARK THE BRIGHT STAINLESS STEEL FINISH

EXPLODED DIAGRAM 6 SLICE TOASTER TSK0006 R02

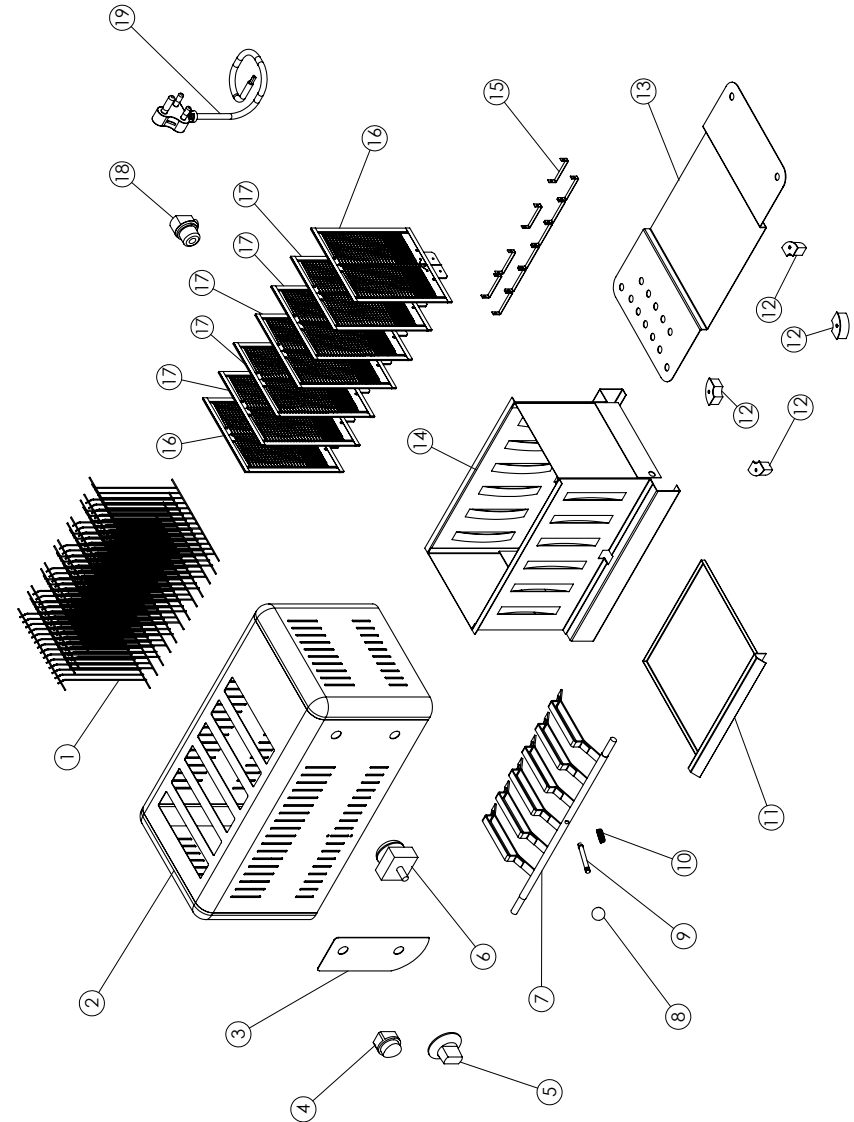

FOUR SLICE TOASTER

MODEL CODE : TSK0004 R02

Part No.	Description
1	WIRE GRID
2	OUTER ENCLOSURE
3	MECHANICAL TIMER
4	FACIA PANEL
5	SWITCH
6	CONTROL KNOB
7	4 FINGER LEVER
8	LEVER KNOB
9	LEVER HANDLE
10	FINGER PLATE LEVER SPRING
11	CRUMB TRAY
12	FOOT
13	BOTTOM PANEL
14	BUZZ BARS
15	INNER ENCLOSURE
16	SIDE ELEMENT 370W
17	CENTRE ELEMENT 500W
18	CABLE GLAND
19	POWER CORD



WARNING

Electric Shock Hazard.

Keep water and other liquids from entering the inside of the equipment. Liquid inside the equipment could cause an electrical shock

 
Do not spray water or cleaning products. Liquid could contact the electrical components and cause a short circuit or an electrical shock.
Do not use equipment if power cord is damaged or has been modified

SAFETY


READ ALL INSTRUCTIONS BEFORE USE. FAILURE TO FOLLOW THESE PRECAUTIONS COULD RESULT IN INJURY TO YOURSELF AND OTHERS

1. The toaster is designed to operate on alternating current only (A.C.).
DO NOT CONNECT TO DIRECT CURRENT (D.C.).
2. Care should be taken when operating this appliance as HOT SURFACES are present which may cause burns.
3. Models TSK0004 and TSK0006 can be connected to an individual 15A mains outlet. DO NOT OVERLOAD CIRCUIT
4. If the power supply cord is damaged it must be replaced with a new cord assembly available from the suppliers agent.
5. Ensure that the equipment and the power supply cord does not come into contact with hot surfaces.
6. Supervision is necessary when the appliance is used in close proximity to children.
7. Use only earthed outlets matching the serial plate voltage.
8. Have equipment installed by a qualified personnel in accordance with local codes and ordinances.
9. Use equipment in a flat level position.
10. Do not operate unattended
11. The equipment may be hot, even though the pilot light is not on.
12. Do not operate if equipment has been damaged or is malfunctioning in any way.

**POSITIONING DIAGRAM
4 SLICE TOASTER
TSK0004 R02**

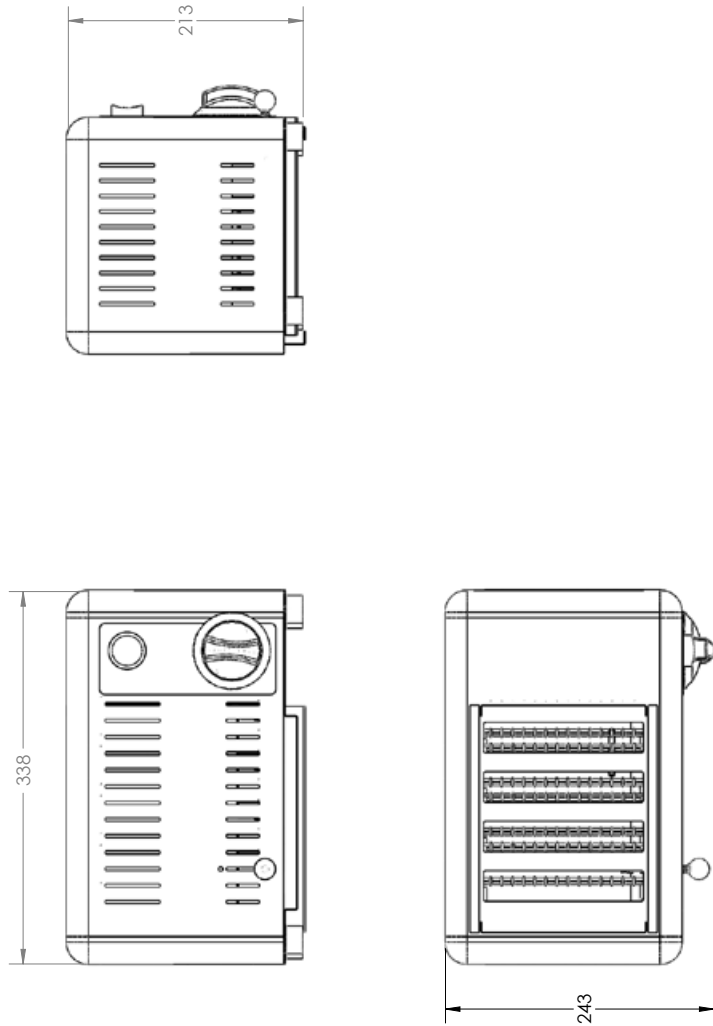


 **EXPLODED DIAGRAM
4 SLICE TOASTER
TSK0004 R02**



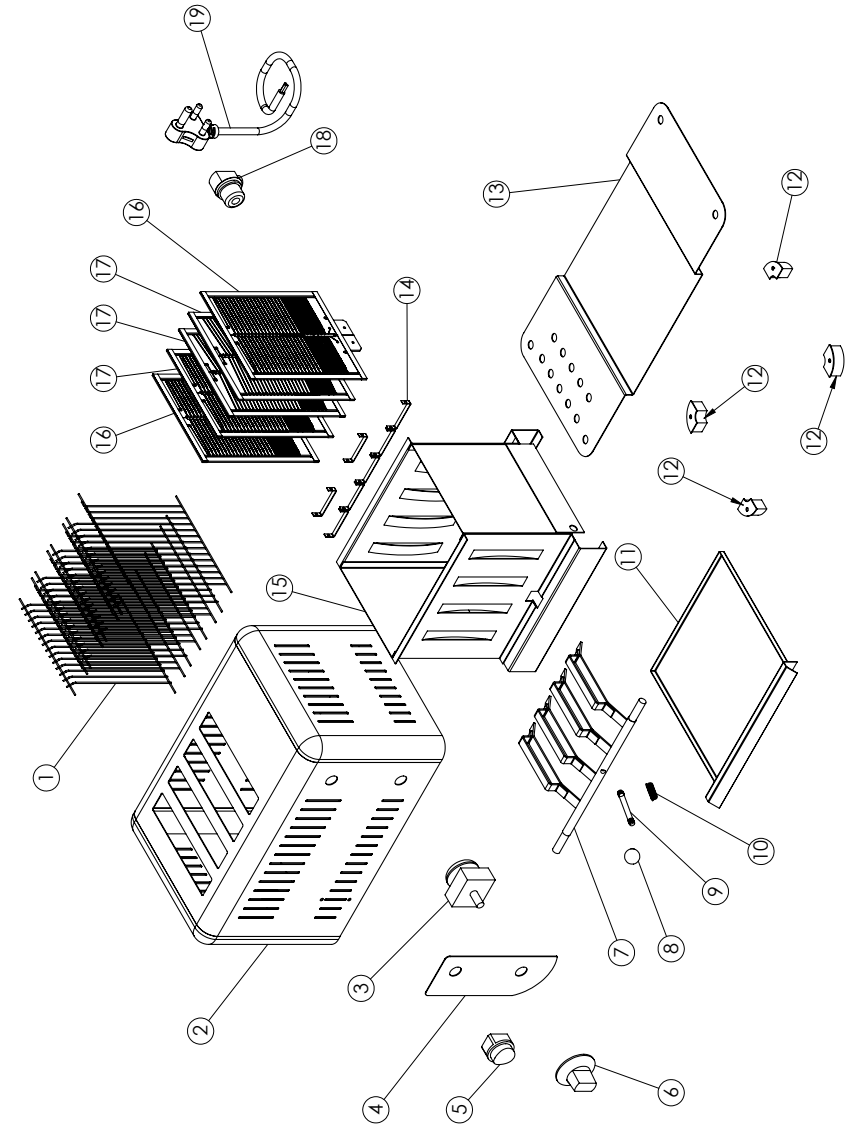


WIRING DIAGRAM
MODEL:6 SLICE TOASTER
MODEL CODE: TSK0006 R02

LEGEND	DESCRIPTION	PART NUMBER
H1	PILOT LIGHT	1-PL-GP
S1	SLICE SELECTOR SWITCH	1-SEL-TSK0004
E1 AND E7	TOASTER ELEMENT 370W	5-370W-TSK0004
E2/E6	TOASTER ELEMENT 500W	5-500W-TSK0004
H2	CONTROL PILOT LIGHT	1-PL-GP
T	TIMER	1-TIMER-TSK0004

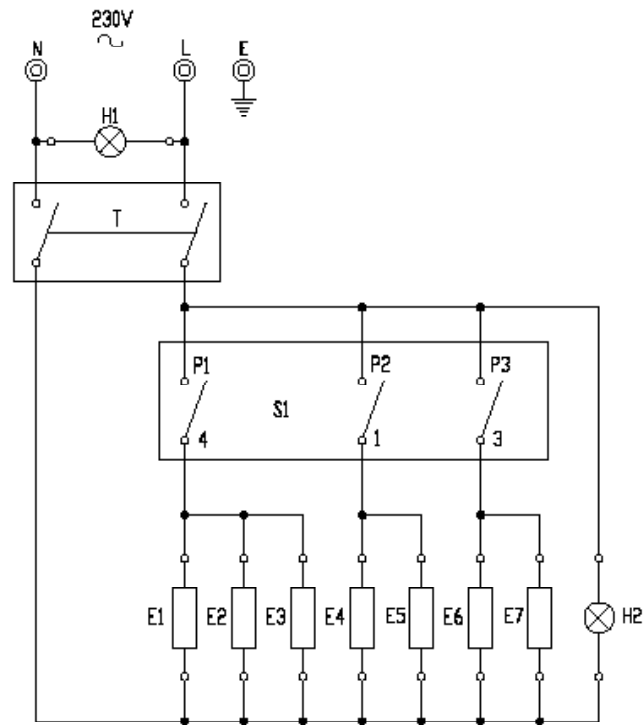 

   POSITIONING DIAGRAM
6 SLICE TOASTER
TSK0006 R02

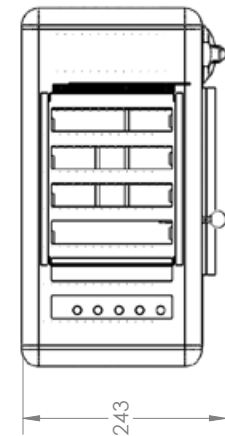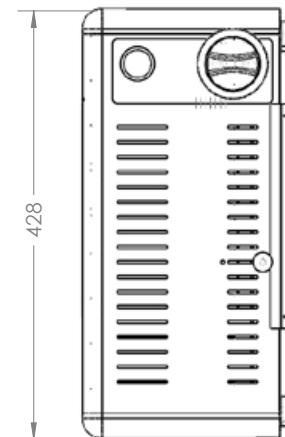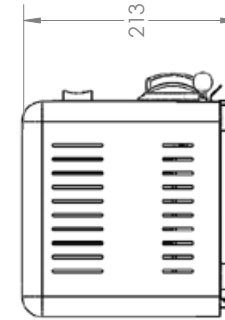

ELECTRICAL CONNECTION INFORMATION

MODEL	DESCRIPTION	VOLTS (V/Hz)	POWER (W)
TSK0004 R02	4 SLICE TOASTER	230/50	2240
TSK0006 R02	6 SLICE TOASTER	230/50	3240



IT IS ESSENTIAL TO MAKE SURE THAT THE INCOMING VOLTAGE IS THE SAME AS THE RATED VOLTAGE OF THE OF THE UNIT AS FOUND ON THE SERIAL PLATE. THE SERIAL PLATE IS LOCATED AT THE REAR OF THE UNIT ADJACENT TO THE INCOMING CABLE ENTRY.

WIRING DIAGRAM MODEL:4 SLICE TOASTER MODEL CODE: TSK0004 R02

LEGEND	DESCRIPTION	PART NUMBER
H1	PILOT LIGHT	1-PL-GP
S1	SLICE SELECTOR SWITCH	1-SEL-TSK0004
E1 AND E5	TOASTER ELEMENT 370W	5-370W-TSK0004
E2/E4	TOASTER ELEMENT 500W	5-500W-TSK0004
H2	CONTROL PILOT LIGHT	1-PL-GP
T	TIMER	1-TIMER-TSK0004

